



Instant Quote (IQ) Smart Pro Tool

Another Smart Tool from WarmlyYours Radiant ... What's your IQ?



Instant Quote on the Spot

The WarmlyYours **Instant Quote (IQ) Smart Pro Tool**, a part of the **Radiant Smart Pro Tools** collection, puts estimating power directly in your hands, giving you the ability to add a smart, easy-to-use floor heating calculator tool to your own website, without making any major changes. With this, you will reinforce your customers' confidence in purchasing WarmlyYours electric radiant floor heating products from you, while also giving your employees the power to better serve your customers with their floor heating estimates.

Fully Customizable

The **IQ** is fully customizable. Allowing you to use your company's logo, and your website's branded theme, and is customizable to adjust to your pricing on our radiant heating products. You can even re-name the tool to fit your business. For example, you can name it *'ABC's Floor Heating Instant Quote'*.

The best part about it is that it is absolutely **FREE** and now available for you to **use immediately on your own website**! As an added bonus, whenever we upgrade or improve the tool, you will **automatically receive the updates without lifting a finger**!

Ready for a Demo?

Tell your WarmlyYours representative that you are interested in our **IQ Tool**. And we'll send you an email containing screenshots of how the tool would look on your website. We'll also provide you with a link and instructions on how to use the tool. If you decide to use this tool on your website, we will personally guide you through the quick and easy setup.

This tool is just one of many innovations we seek to provide for you, our valued professional.

and our calculat	e square footage of the area y or will estimate the cost of you oor warming is not installed un	r floor warmin	ig or snow melting project.	1 Tib Xinur
Application	Floor Warming	•		
Surface Type	Tile and Stone	•		
Heating Element Type	Tempzone	•		
	Rectangular Zone		Enter Square Footage to be Warmed:	
Dimensions of Area To be	Length ft. in.	OR		CALCULATE >
Heated	Width ft. in.		Square Feet	
To get started permanent fixt Divide the des For each recta	to Calculate the S enter the area that you woul ures or anything than goes th ignated area into rectangular ngular zone, enter the length nore zones as required. The	d like to warn rrough the su zones, as illu (A) and widt	n. Remember to exclude the rface. ustrated below. Be sure to u h (B) in feet and inches as sl	area that is occupied by se accurate measurements hown in the example below.
To get started permanent fixt Divide the des For each recta You can add n	enter the area that you woul ures or anything than goes th ignated area into rectangular ngular zone, enter the length	d like to warn rrough the su zones, as illu (A) and widt lotal square fo	 Remember to exclude the rface. ustrated below. Be sure to u h (B) in feet and inches as slootage will update as you type 	area that is occupied by se accurate measurements hown in the example below. se.
To get started permanent fixt Divide the des For each recta You can add r Then click the	enter the area that you woul ures or anything than goes th ignated area into rectangular nore zones as required. The "CALCULATE" button and w	d like to warn rrough the su zones, as illu (A) and widt lotal square fo	 Remember to exclude the rface. ustrated below. Be sure to u h (B) in feet and inches as slootage will update as you type 	area that is occupied by se accurate measurements hown in the example below. products to warm your